

Table of Contents

MCF-DIN105 Operating Manual	1
1. Description	1
2. Characteristics	2
3. Installation	2
5. Ordering code	3
6 Contacts	3



MCF-DIN105 Operating Manual

Important safety information



Read this manual before attempting to install the device! Failure to observe recommendations included in this manual may be dangerous or cause a violation of the law. The manufacturer will not be held responsible for any loss or damage resulting from not following the instructions of this operating manual.

- Do not dismantle or modify in any way.
- Avoid mechanical stress
- Do not use any detergent or alcohol to clean the device.

Disposal information for users



Pursuant to and in accordance with Article 14 of the Directive 2012/19/EU of the European Parliament on waste electrical and electronic equipment (WEEE).

The barred symbol of the rubbish bin shown on the equipment indicates that, at the end of its useful life, the product must be collected separately from other waste.

For additional information and how to carry out disposal, please contact the certified disposal service providers.

1. Description

The MCF-DIN105 is an optional DIN Rail mounting optional board for products of the series Marte and MCF-LW06xxx, which can allow easier assembly and wiring (sensor and antenna not included).




2. Characteristics

- Storage temperature range $-20^{\circ}\text{C} \div +80^{\circ}\text{C}$
- Working temperature range $-10^{\circ}\text{C} \div +70^{\circ}\text{C}$
- Dimension: 105x130x55mm

3. Installation

The installation has to be done by a qualified electrician. The device is intended as subassembly (component). It is responsibility of the assembler of equipment incorporating to ensure that the overall equipment is safe.

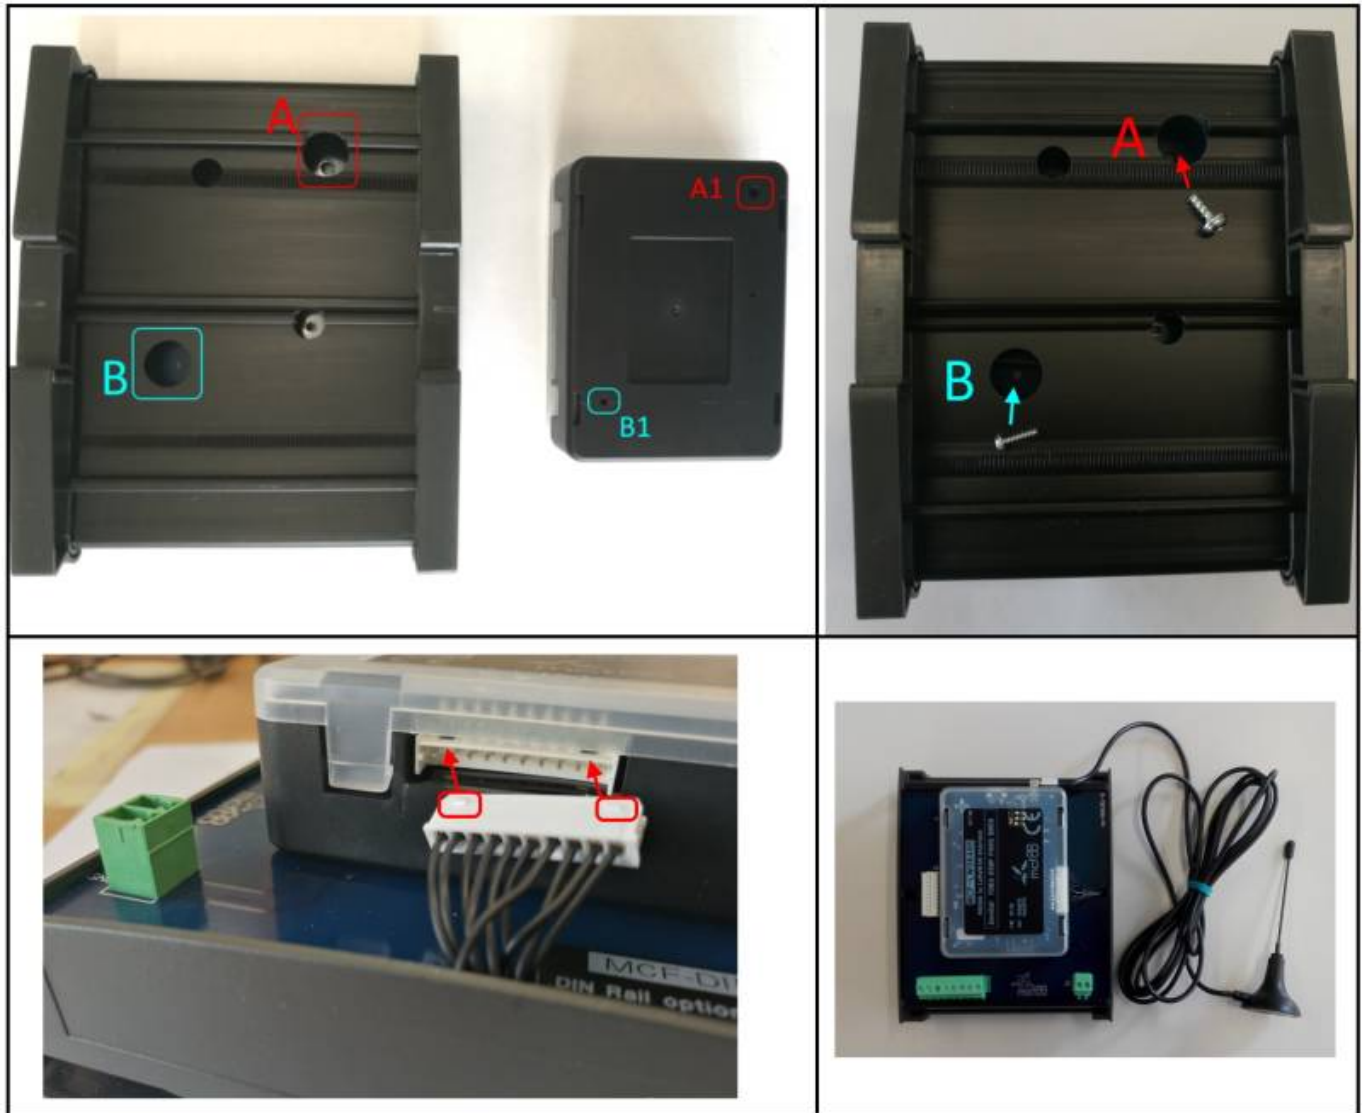

5. Ordering code

Ordering Code	Description
MCF-DIN105	DIN Rail mounting optional board 105mm

6 Contacts

enginko Srl

Via Roma 3 I-28060 Sozzago (NO)

T : +39 0321 15 93 088

E : info@enginko.com

PEC: enginkosrl@legalmail.it

W: enginko.com

rev.0

From:

<https://www.enginko.com/support/> - **enginko.support.center**

Permanent link:

https://www.enginko.com/support/doku.php?id=manual_mcf-din105&rev=1685338420

Last update: **2023/05/29 07:33**

